



MEDISCA[®]
YOUR TRUSTED PARTNER IN COMPOUNDING

PRODUCT NO.: 7377













MD™ Pen (6.5mL, 0.15mL Metered Dose)

Pump with Bottle & Cap, White with Clear View Window

DESCRIPTION: The new portfolio of MD Dispensers was engineered for accuracy with a professional structure, yet designed to convey a cosmetic appeal. The MD Dispenser will maintain the integrity of a formulation, allowing users to dose preparations easily and accurately. The first of its kind on the market, this dispenser features a UV resistant view window for added convenience.

FEATURES:

-  Airless dispensing
-  Slim, sleek pen-type look
-  Silicone tip for smooth application
-  Metered dispensed volume
-  Excellent evacuation
-  Minimal priming required
-  UV-resistant
-  Protection from oxidation
-  Hygienic use, no bacterial contamination
-  Latex-, BPA- and PVC-free

TECHNICAL SPECIFICATIONS:

Capacity (mL)	6.5
Dispensed Volume (mL)	0.15
Precision (% RSD)*	< 3.0
Material of Construction	Piston: Polyethylene Inner Bottle: Polypropylene Outer Bottle: Polypropylene Cap: Polypropylene Nozzle: Polypropylene

	Tip: Silicone
Dimensions, L x Ø (cm / in)	13.9 x 2.0 / 5.5 x 0.8
Color	White with view window
Filling Method	3 piece assembly: 1. Top-Filled Pen 2. Snap-Cap Spring Pump 3. Outer Casing
UV-Resistance	Bottle: Yes View Window: Yes

* Value established using Medisca cream bases.

FILLING INSTRUCTIONS:


MD Pen

TO FILL :

TO USE :

To minimize air entrapment and ensure proper function:

- Use a nozzle to fill from the bottom up.
- Tap the dispenser multiple times while filling to flatten the cream and evacuate air.

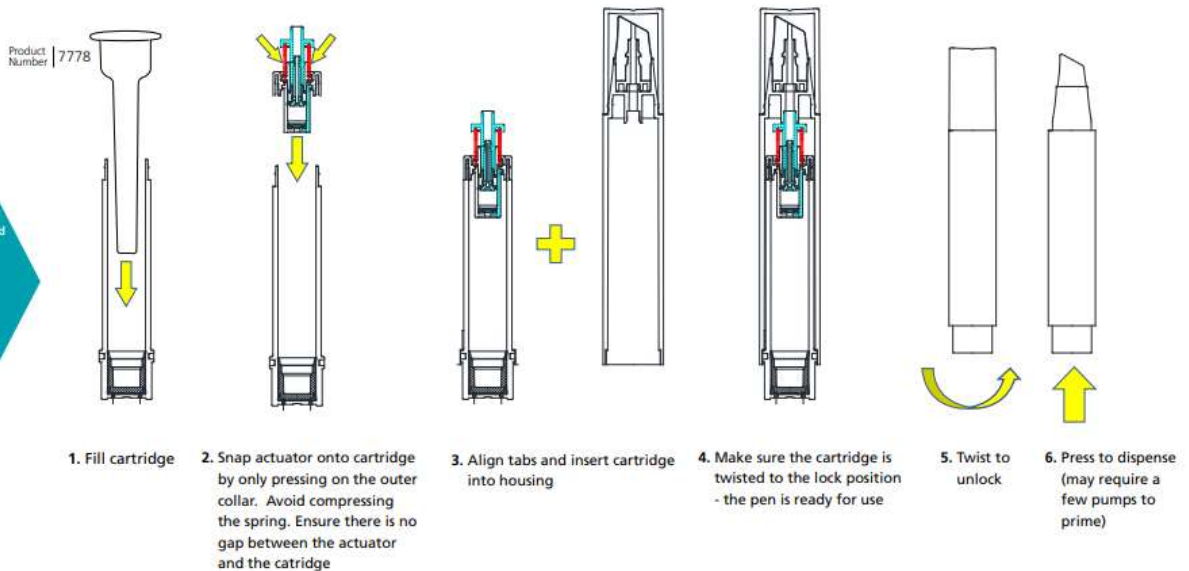

USA | CANADA | AUSTRALIA PACIFIC | EUROPE

WWW.MEDISCA.COM