




MEDISCA[®]
YOUR TRUSTED PARTNER IN COMPOUNDING

PRODUCT NO.: 7901-01



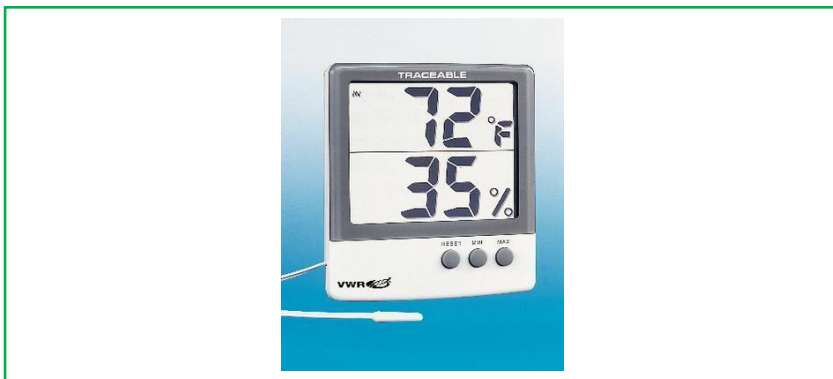







TEMPERATURE/HUMIDITY METER

°F/°C, Digital Readout, w/Probe & 10ft Cable

DESCRIPTION: Unit features an external thermometer probe with 3.1m (10') cable and a 2.9cm (11/8") high digital readout that continuously and simultaneously displays ambient humidity and ambient and external probe temperatures. Display is updated once a second and is readable from up to 10.7m (35'). Fast-response, solid-state sensors show condition changes in less than 30 seconds. The minimum and maximum memories may be displayed or cleared at any time with the touch of a button. External temperature sensor performs accurately under water. Self-contained unit requires no adjustment or maintenance. Case is chemical and shock-resistant ABS plastic.

Supplied with probe and cable, flip-open stand, wall mount, and AAA alkaline battery.

FEATURES:

-  Traceable
-  Dual Recall Memory
-  Reads °F and °C
-  Probe and 10ft cable
-  Temperature Range, Ambient Sensor: -5 to 50°C (23 to 122°F)
-  Temperature Range, External Probe: -50 to 70°C (-58 to 158°F)
-  Temperature Accuracy: ±1°C
-  Dimensions: 9.8 x 10.8 x 1.9 cm / 3 27/32 x 4 1/4 x 3/4 in